

Programming User Codes

Paradox 1738

Note:

Multiple people (system users) can each have their own 4 digit access code for arming and disarming the alarm system. Before programming user codes, make sure that H & B Security Centre has activated the user number you want to use.

If your system can arm/disarm different areas separately (such as office and warehouse), make sure that H & B Security Centre has programmed each user to have access to the desired area(s).

Step		Explanation
1	Press [Enter]	Tells the system you want to program user access codes.
2	Enter your 4 digit master code	The master code acts as a password to get you into programming. The [Enter] button will flash if the master code entered is correct.
3	Enter 3 digit user number (ie: 001, 004, 048, etc.)	Tells the system which user you want to program. Valid users are 001 (Master Code), and 004-048. Do not use 002 or 003
4	Enter the new 4 digit access code for the user	The default is 1234. Do not use it.
5	Press [Clear]	Finishes and exits programming.
		Note: If you want to erase a code without putting another one in it's place, press the [Force] button 4 times as the new access code in step 4.

Examples:

If your Master Code is 1234, and you want to program user 9 with an access code of 5678, press the following buttons on the keypad:

[Enter] 1 2 3 4 0 0 9 5 6 7 8 [Clear]

To change your master code from 1234 to 5678, press the following on the keypad:

[Enter] 1 2 3 4 0 0 1 5 6 7 8 [Clear]